

If the pump ran without water, accumulated air inside the pump needs to be ventilated:

- Turn on the pump and make sure the inlet is submerged.
- Loosen the air release valve on top of the pump until you hear air leaving the pump.
- When water starts coming out immediately close the valve completely.
- Dry off any water that may have fallen onto the pump and into the pump compartment.

