

fertiliser
2.0ltr

Code: MT-GN81-230




Remarks: LivePanel irrigation unit

Version: January 2025

Drawing nr. nvt A3



Deze tekening is eigendom van Mobilane BV, het is niet toegestaan deze te reproduceren of zonder toestemming te gebruiken

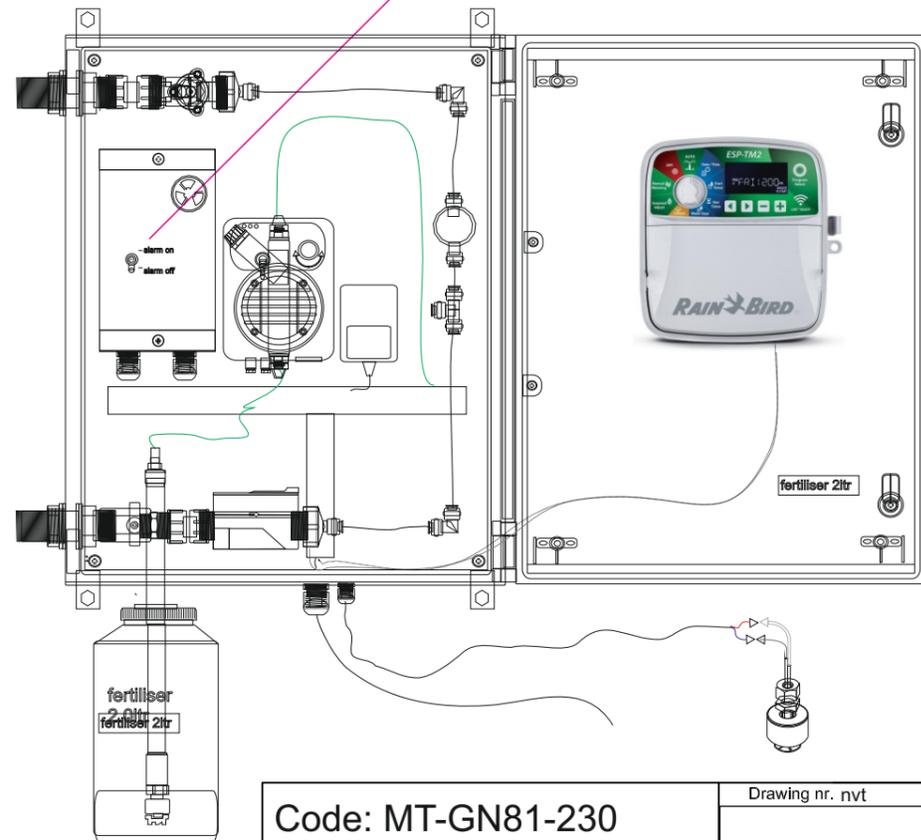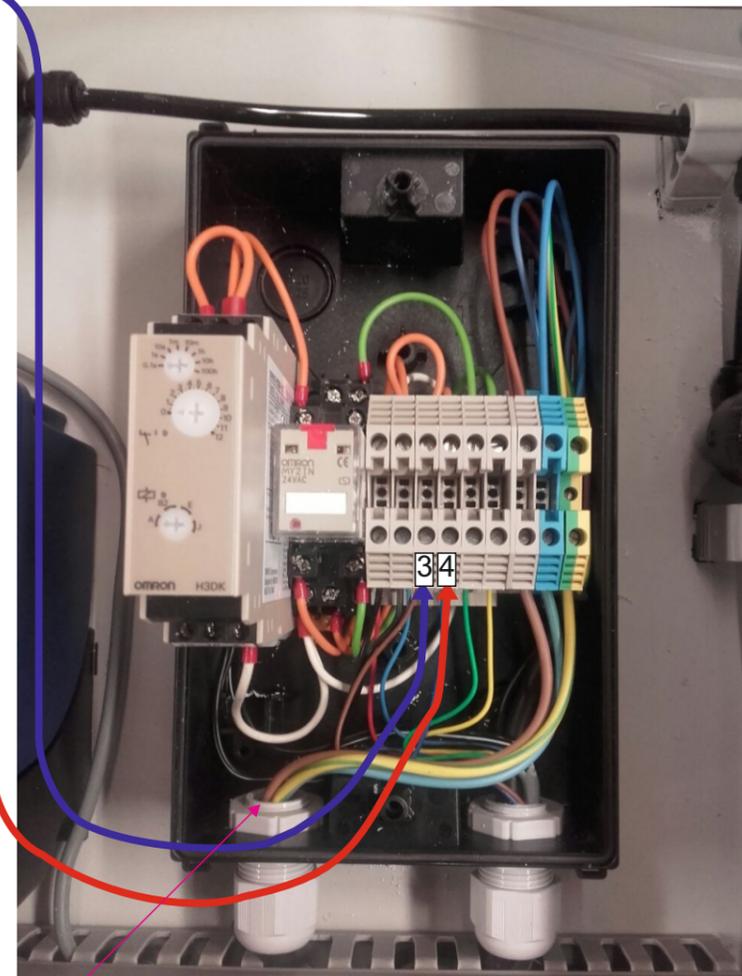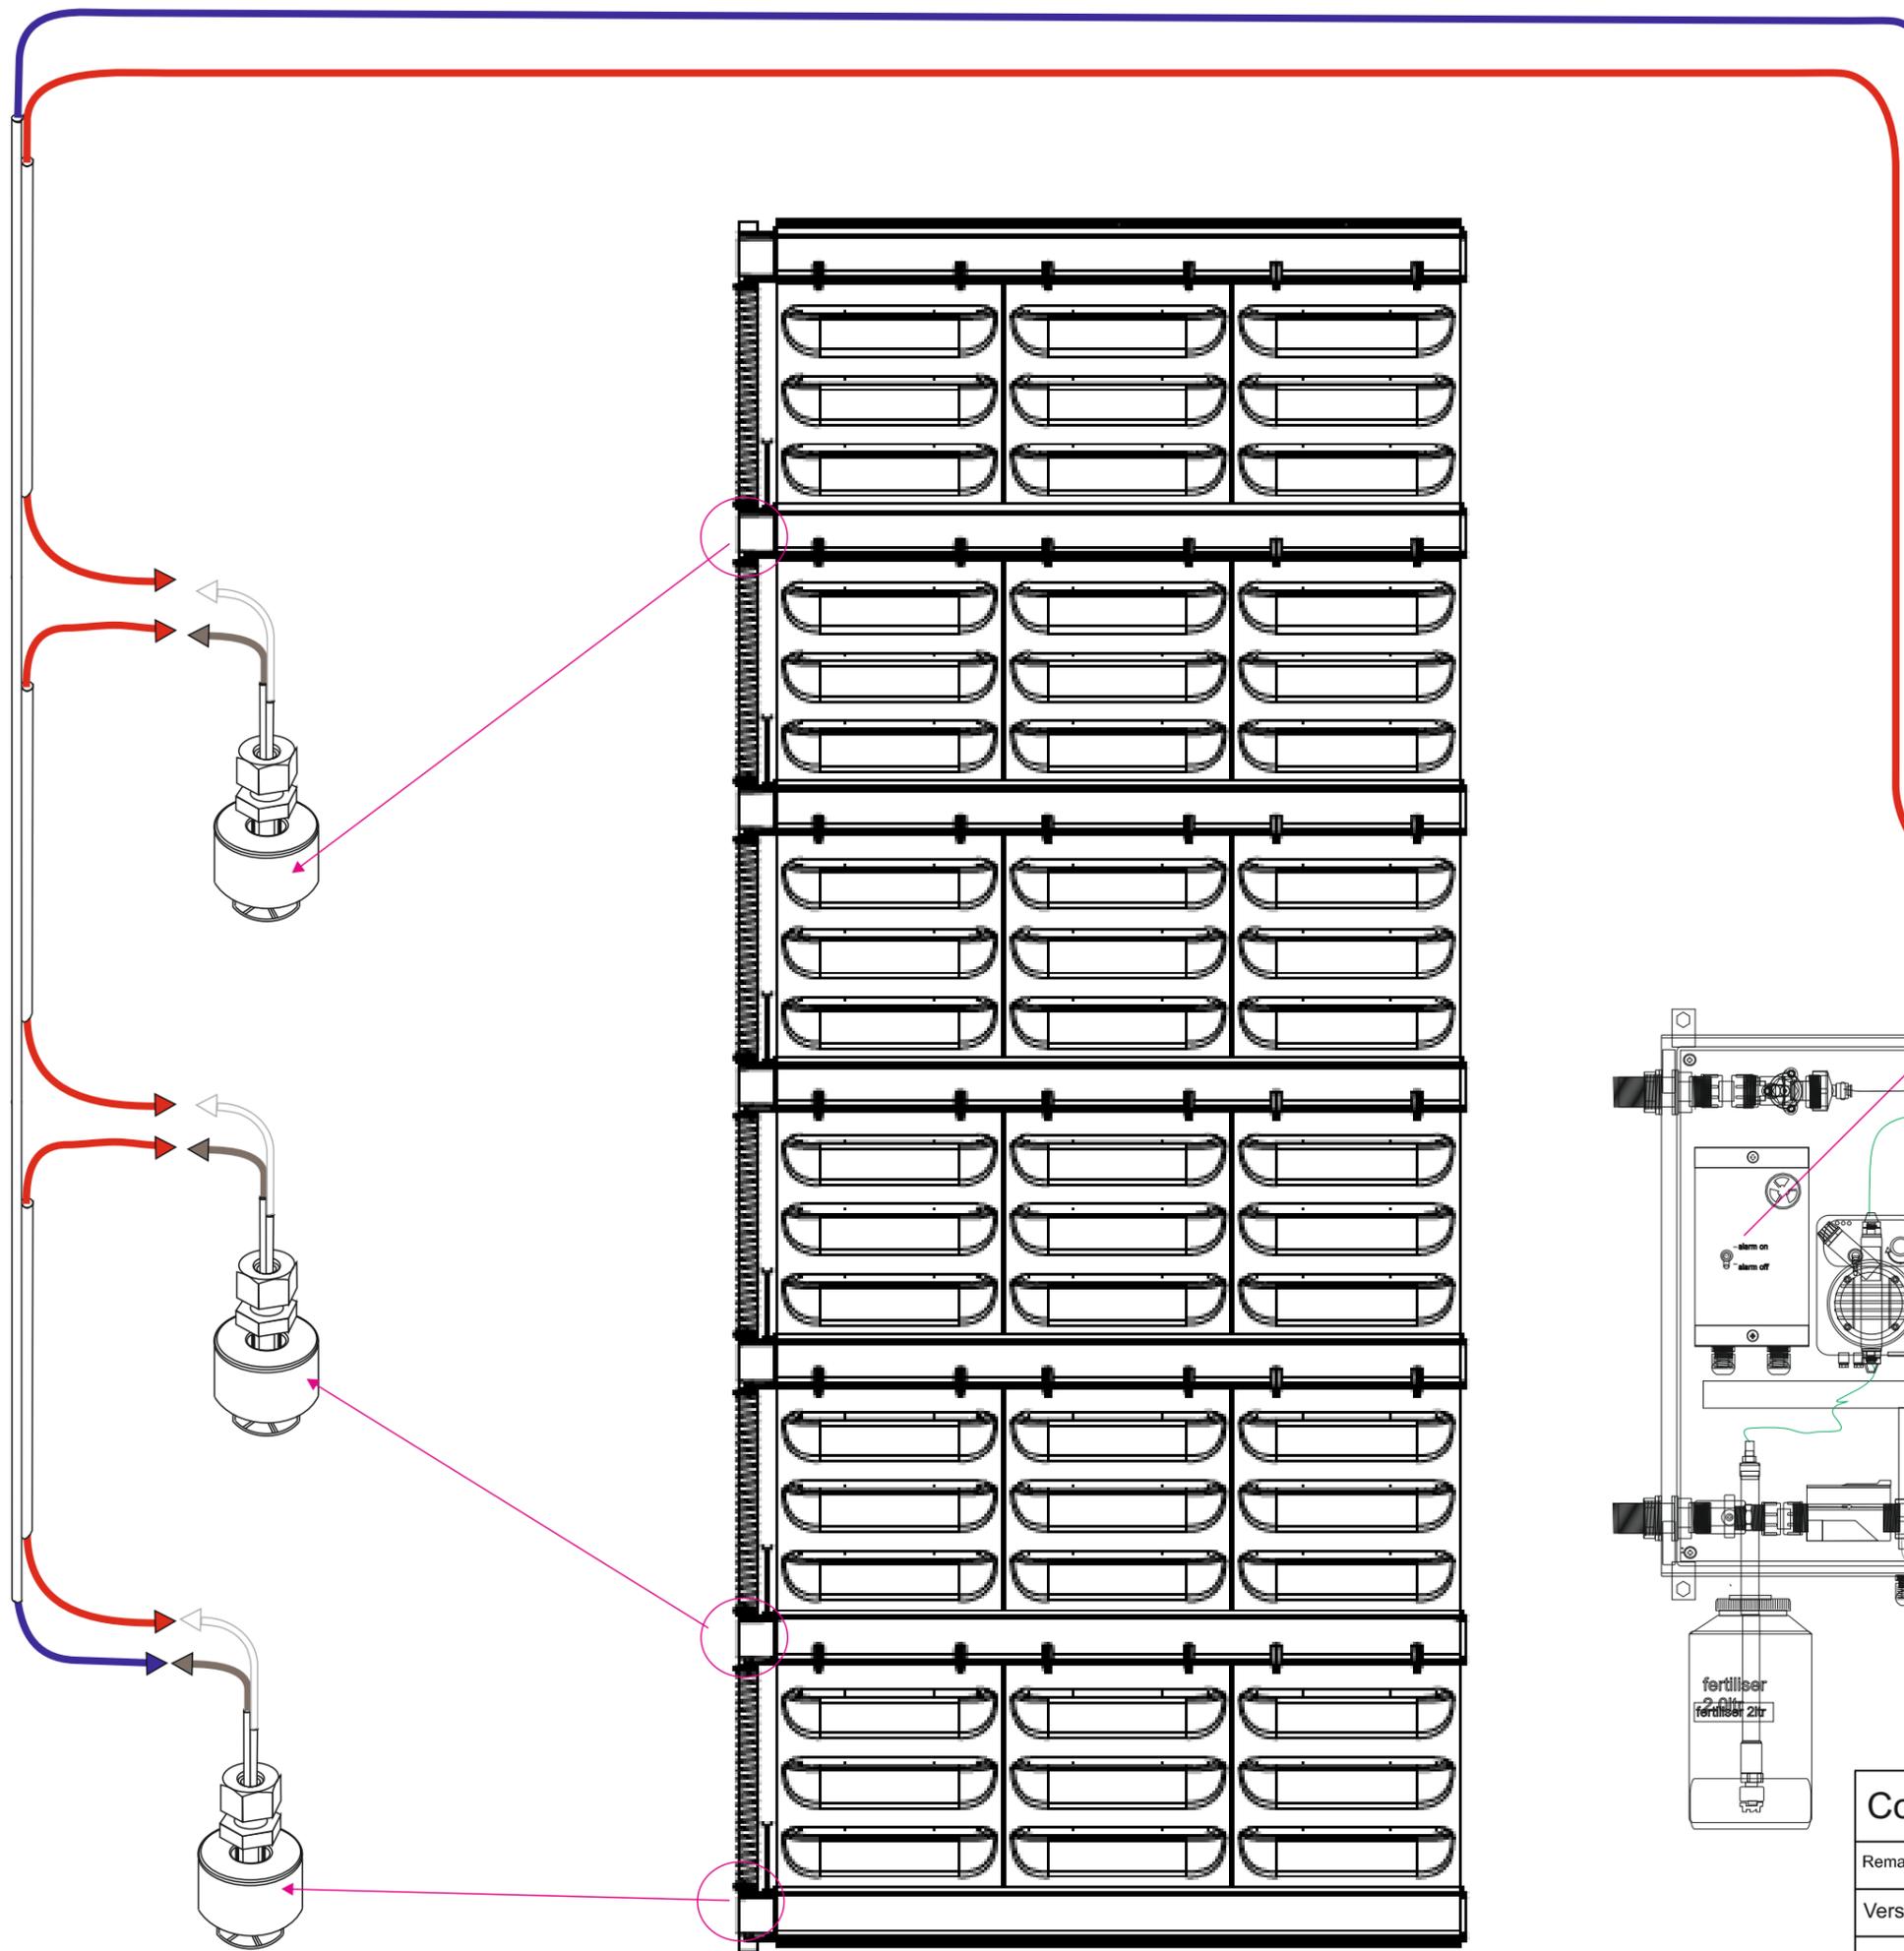

Code: MT-GN81-230


Remarks: Wiring sheet

Version: April 2021

Drawing nr. nvt A3




Deze tekening is eigendom van Mobilane BV, het is niet toegestaan deze te reproduceren of zonder toestemming te gebruiken

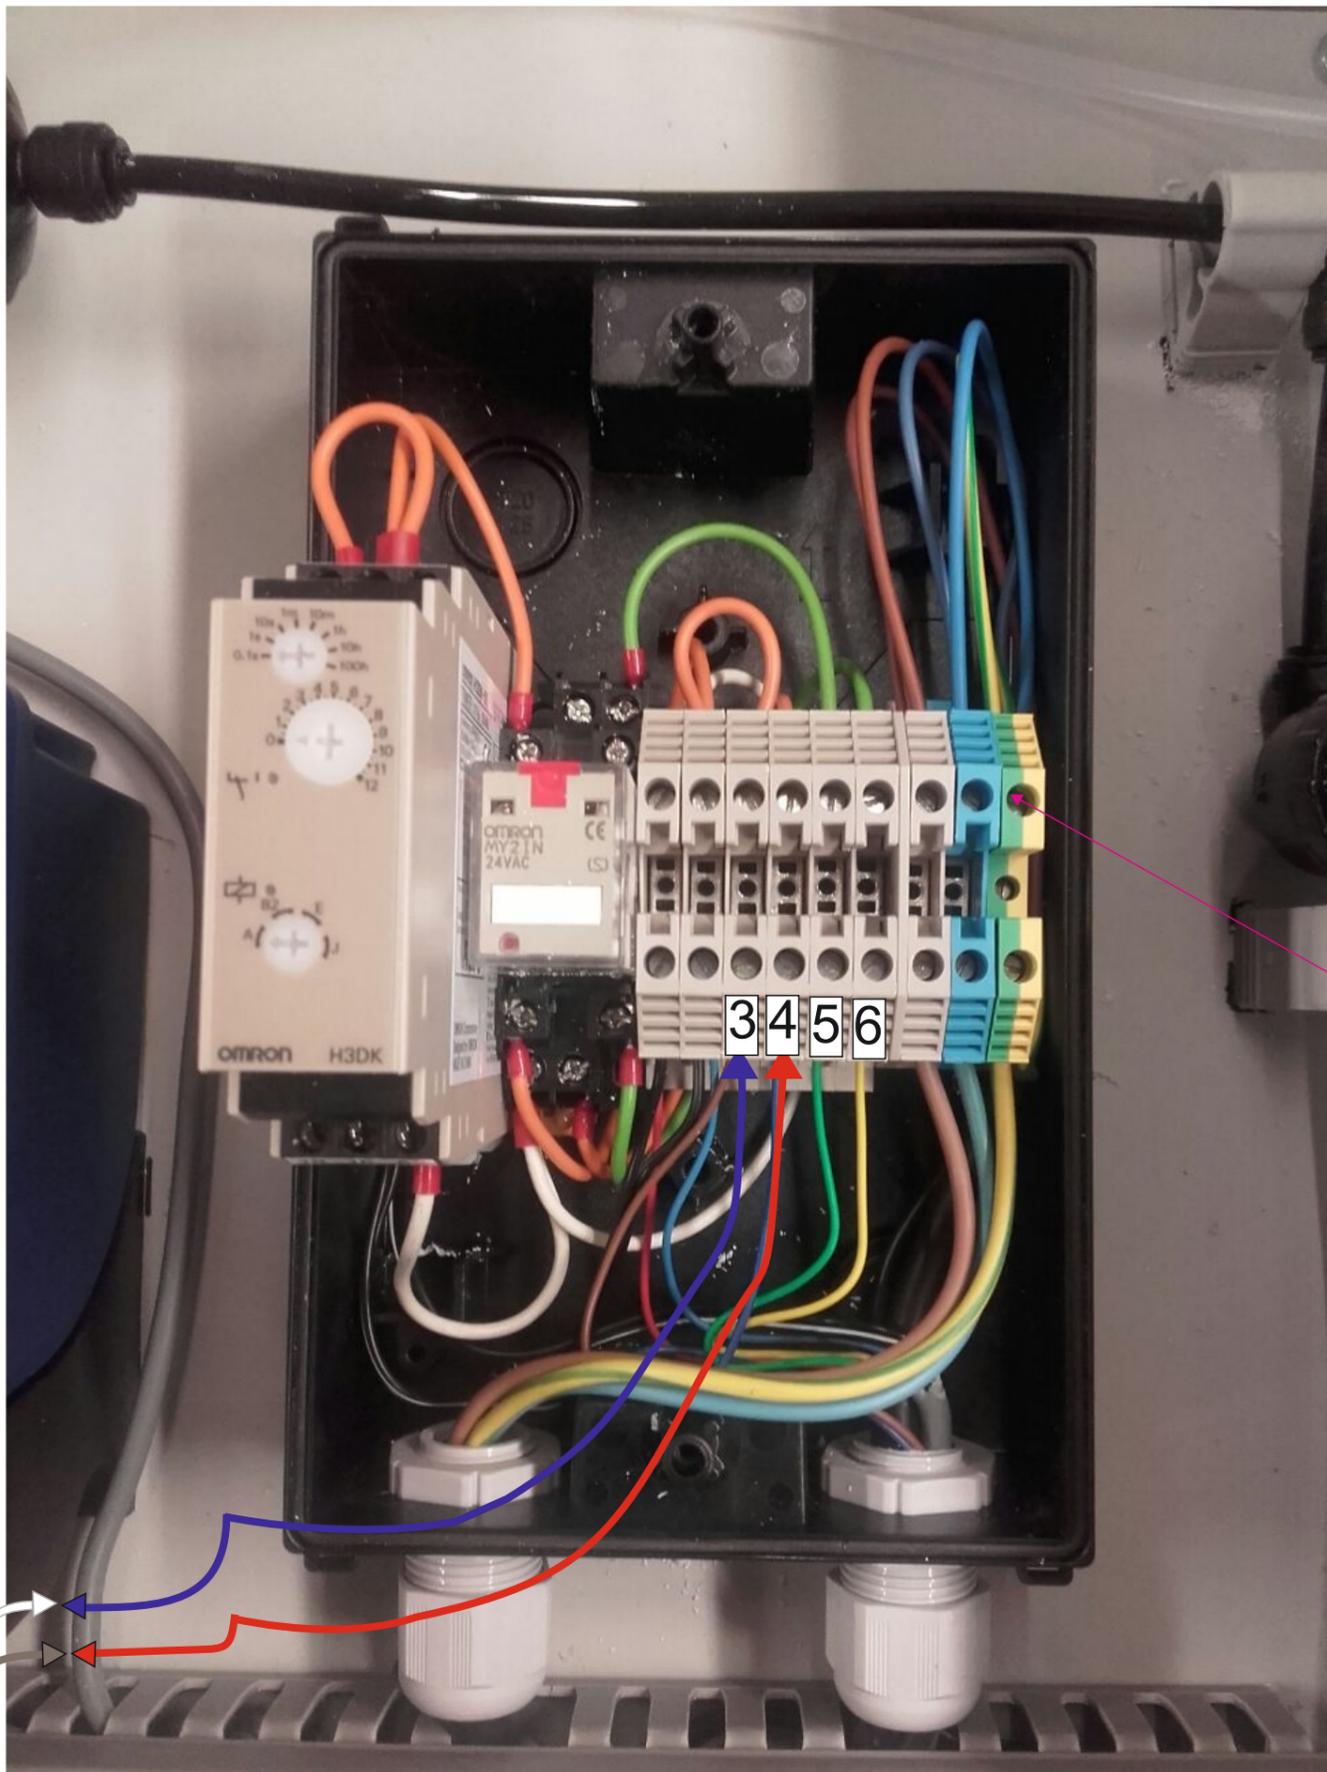

10 hours

x 2.5

manuals can be found inside the door of the irrigation unit or can be downloaded from: www.mobilane.com

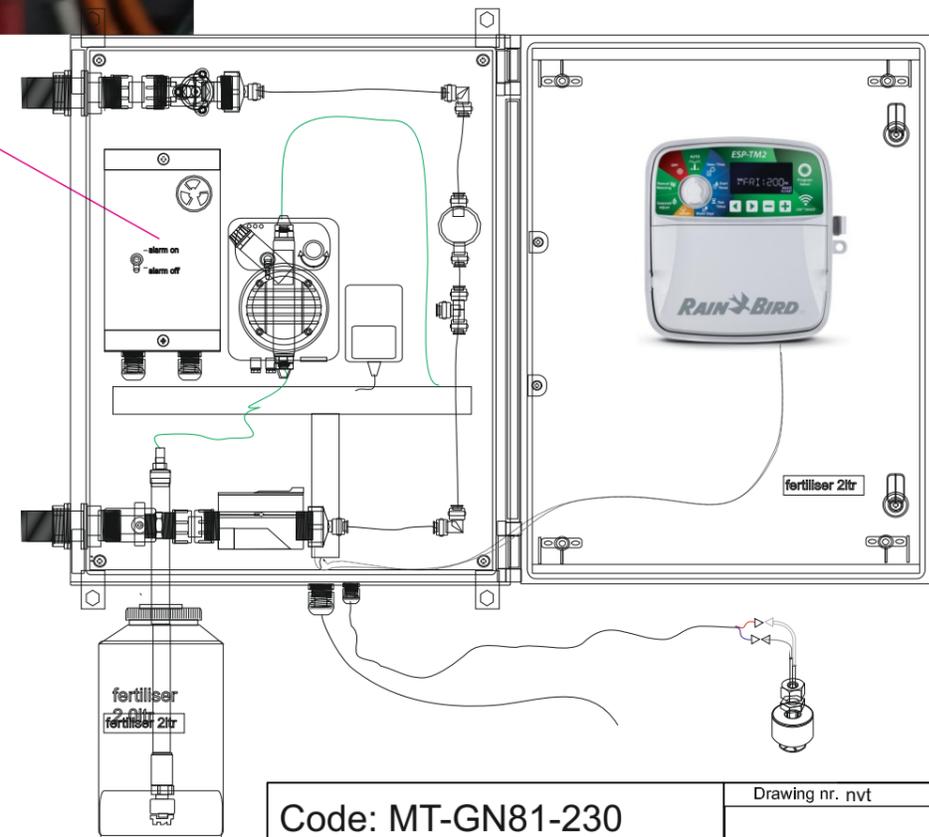

Code: MT-GN81-230

Remarks: Wiring sheet

Version: April 2021

Drawing nr. nvt

A3




Deze tekening is eigendom van Mobilane BV, het is niet toegestaan deze te reproduceren of zonder toestemming te gebruiken

Note:

The SMS alarm dialer has its own SIM card.

Important: there must be sufficient signal strength available

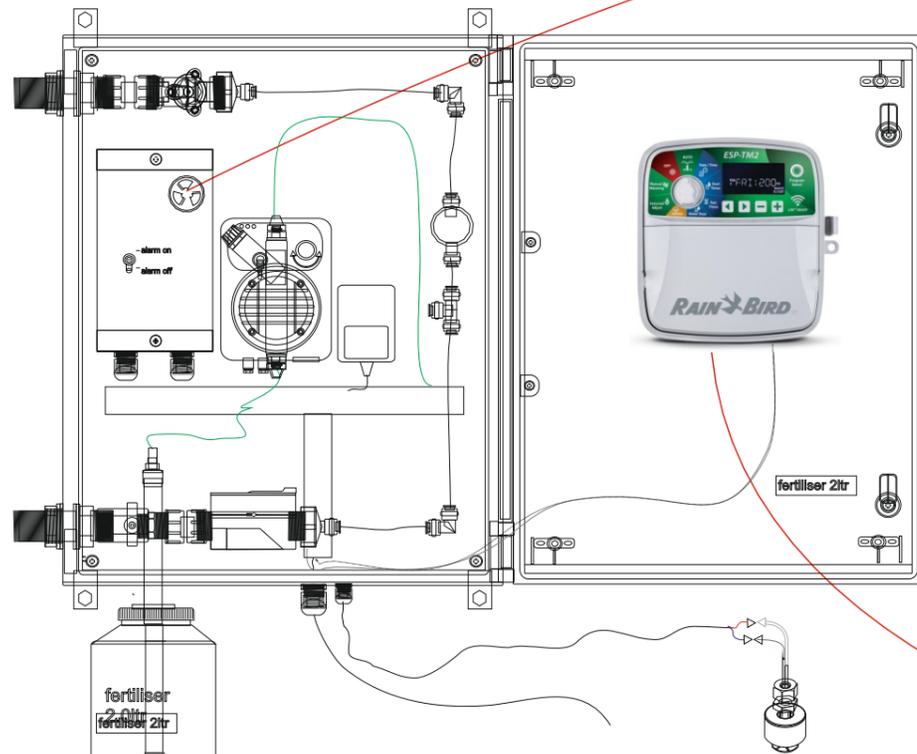

Built in GSM Device in cabinet - option



WiFi Module - option





Note:



Wifi module for remote control of the irrigation controller via mobile phone. A working wifi network must be present

Code: MT-GN81-INTERN SMS (Parts)	Drawing nr. nvt	A3
Code: MT-GN81-WIFI LINK		
option: WiFi Module/GSM Device		
Version: April 2021		
Deze tekening is eigendom van Mobilane BV, het is niet toegestaan deze te reproduceren of zonder toestemming te gebruiken		



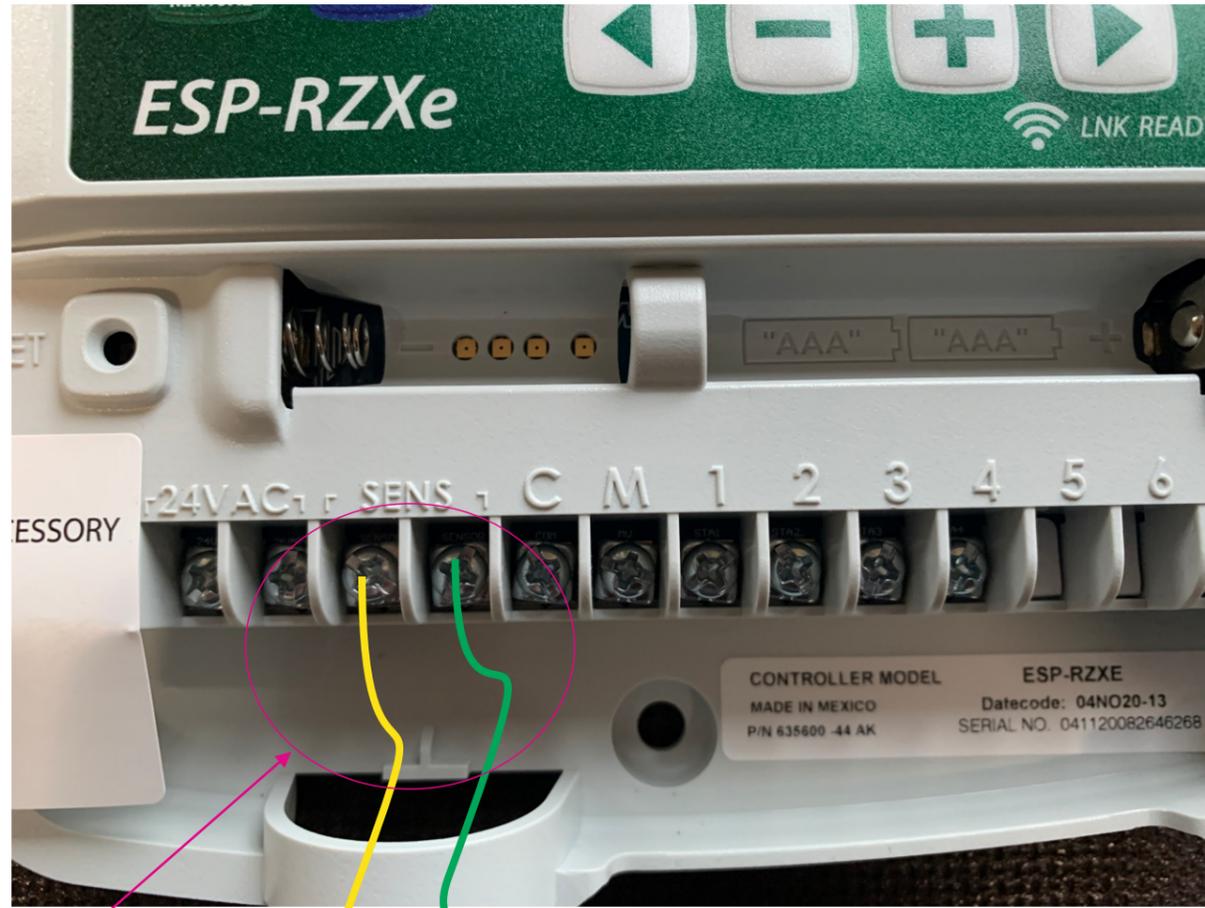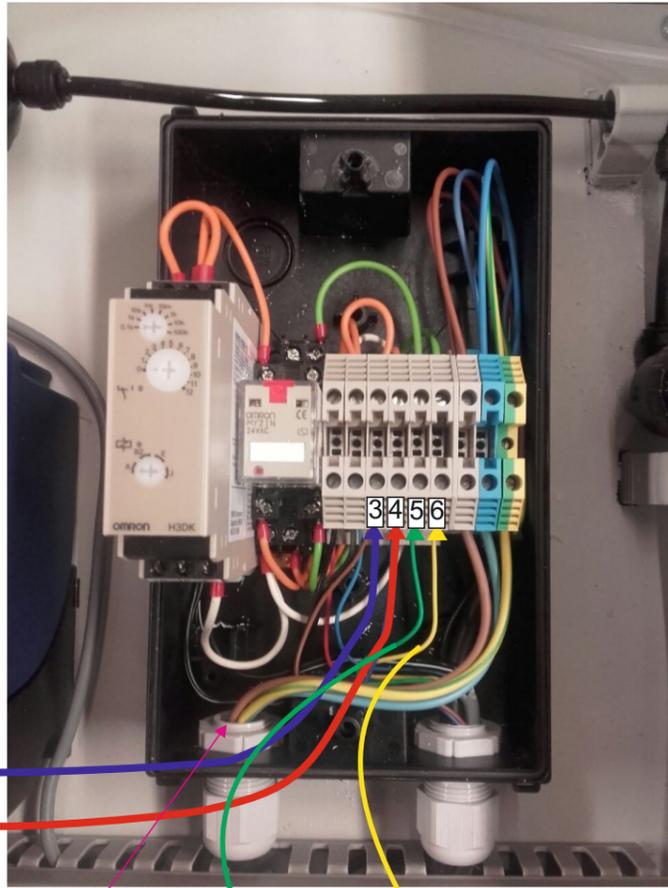

temperature sensor

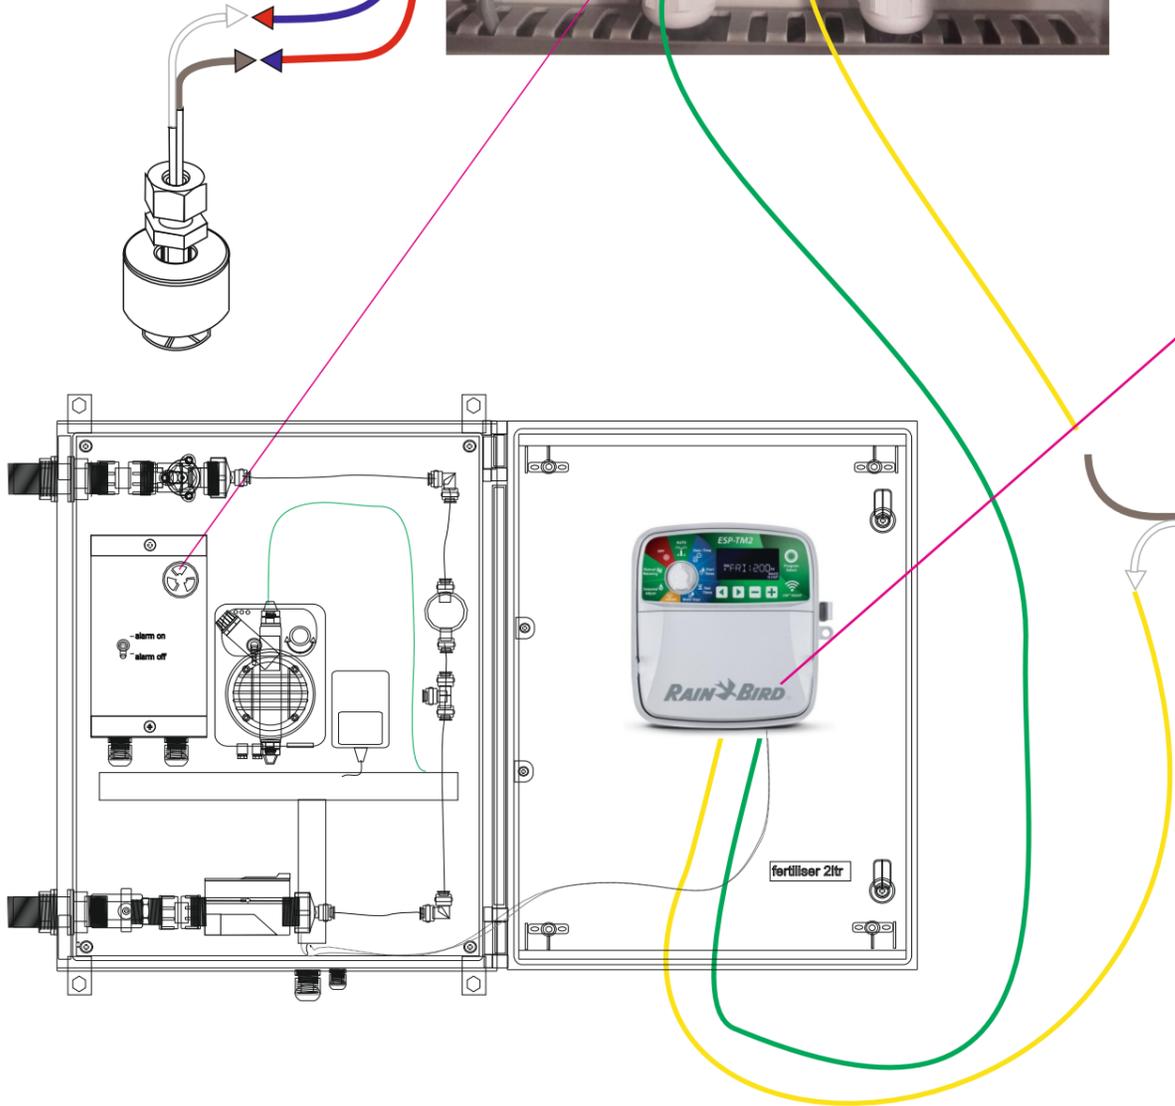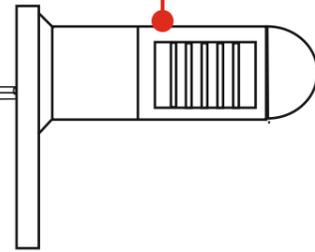

Code: MT-GN81-FREEZE CLICK

option: Temperature sensor (wiring sheet)

Version: April 2021


Drawing nr. nvt A3



Deze tekening is eigendom van Mobilane BV, het is niet toegestaan deze te reproduceren of zonder toestemming te gebruiken

To bleed the pulse pump:


Fill up the tank and open button **B** by turning it to the left.
Put the switch underneath the injection pump on to **T** and turn button **C** to the right completely.
Start the irrigation program by opening a valve manually.
The irrigation program and the injection pump will start to work.
Wait till fertilizer is coming out of outlet **D** and close button **B** by turning it to the right.
Put the switch of the fertilizer back to **F** again.

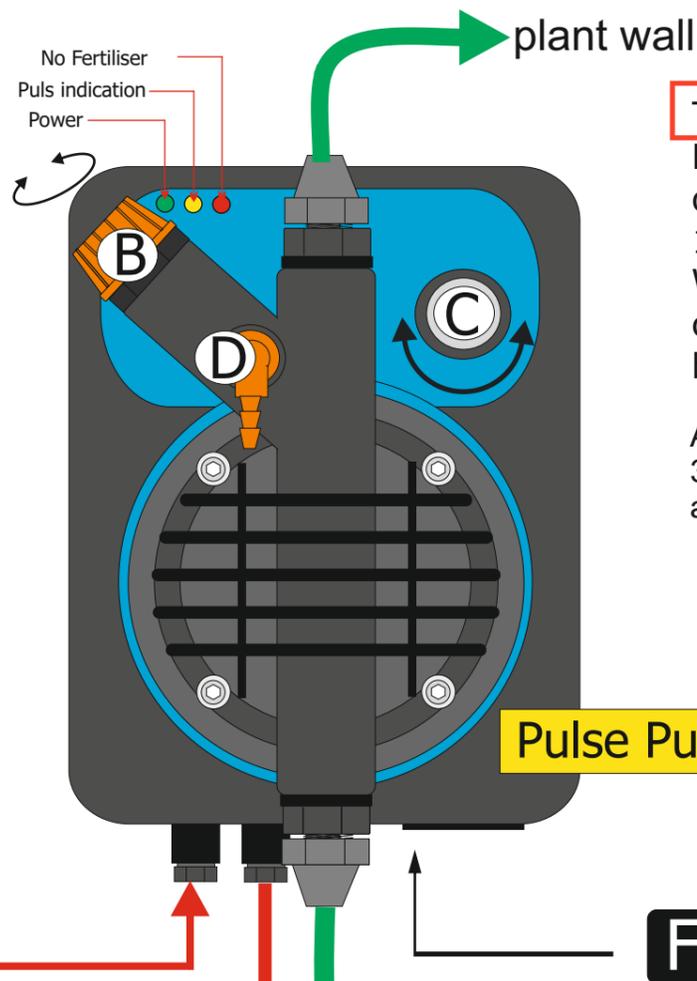

To change the setting of the injection pump:

Put the switch underneath the injection pump on to **F** and the pump will give 1 pulse/litre (0.69ml/ltr/5bar- 0.83/ltr/3bar).
When you put the switch on to **T** you can change the amount of pulses by turning button **C** to the left or right.

As a general setting the following can be used
3 to 4 pulses per liter during the growing season
and 1 to 2 during autumn.

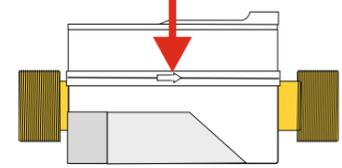

Ultrasonic litre counter

<p>Dosage fertilizer/Ciro CleanDrip: Jerrycan 2.0 ltr:</p> <p>Dosage 1 pulse per liter (= approx 0.1gr/ltr) 280gr Peters 15+11+29 290ml Ciro Cleandrip</p> <p>Dosage 2 pulses each liter (= approx 0.2gr/ltr) 280gr Peters 15+11+29 145ml Ciro Cleandrip</p> <p>Dosage 4 pulses each liter(= approx 0,4gr/ltr) 280gr Peters 15+11+29 75ml Ciro Cleandrip</p>

